### Acuo LED Sconce Installation Instructions

# 

### General Product information




4

This product is suitable for indoor dry locations only.


This product is to be installd to a standard 4" junction box with 3" round plaster ring or an octagon junction box.

## CAUTION - RISK OF FIRE

This product requires installation by a qualified electrician. Before installing be sure to read all instructions and TURN POWER OFF TO THE JUNCTION BOX

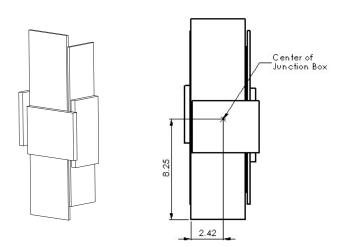

Junction Box

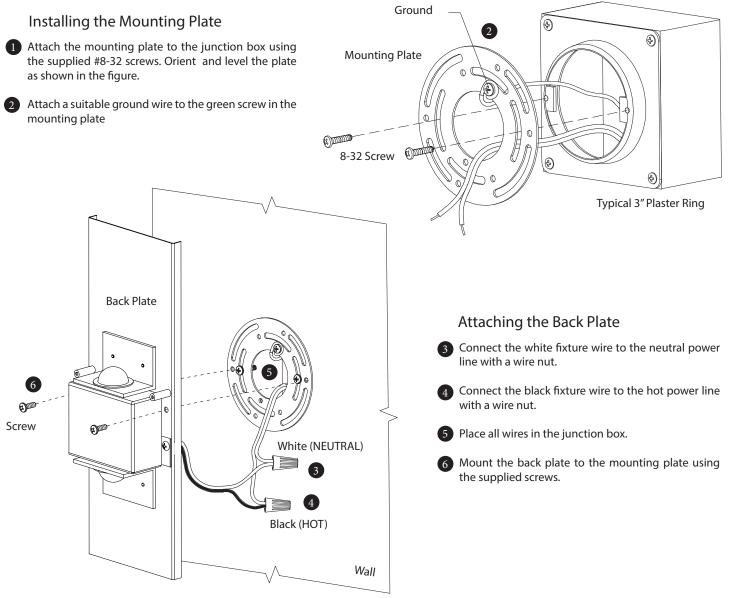


### Acuo LED Sconce Installation Instructions



### Attaching the Shade

🕖 Slide the shade onto the posts protruding from the back plate until the back of the shade is flush with the wall.

8 Tighten the two screws on top of the mounting blocks inside the shade.

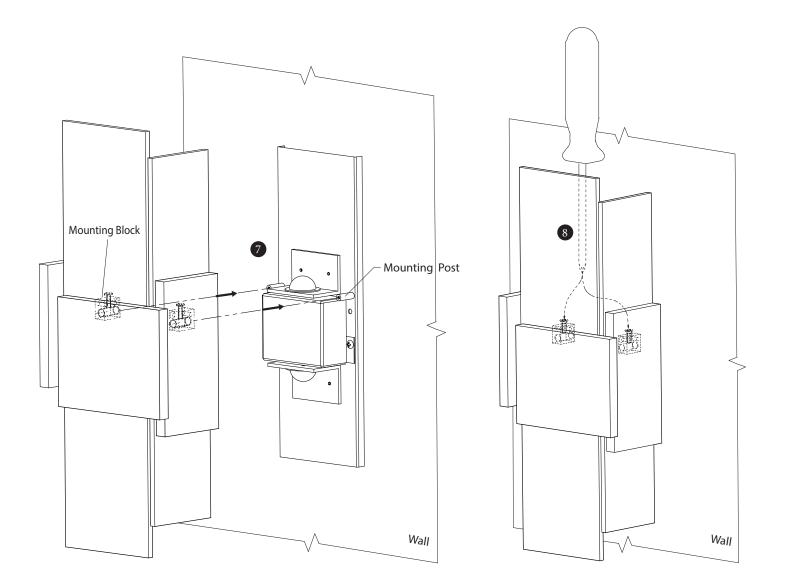

### Important Note!

This fixture comes with a universal driver that can operate within an input voltage range of 120 and 277 V AC. See the table below to understand which types of dimming are available for a particular input voltage.

Input Voltage	Dimming Type
120	Triac, ELV, and 0-10V
240	0-10V only
277	0-10V only

The purple and grey leads exiting from the LED driver are there to enable dimming of the fixture through the use of a compatible 0-10V dimmer. If the fixture is to be dimmed using a 0-10V dimmer, follow the wiring instructions provided with the dimmer.

If the fixture is NOT to be dimmed using a 0-10V dimmer, the tinned ends of these leads should be snipped off and the leads should be capped individually such that they remain isolated from one another.

The wiring diagram below only applies if the fixture is to be controlled by a 0-10V dimmer.

