

General Product Information

This product is suitable for indoor, dry and damp locations only.

Junction Box Requirements: This fixture can be mounted to most standard junction boxes. It is the installer's responsibility to ensure that the site conditions, junction box, and fasteners used are suitable to support the weight of the fixture.

Damage due to incorrect connections can be detected at the factory and is not covered under warranty.

Fixture can be dimmed with 0-10V dimming only.

This fixture must be connected to an undimmed AC circuit. Attempting to control/dim the fixture with TRIAC or ELV dimming may cause irreversible damage to the integrated LED driver.

CAUTION - RISK OF FIRE

This product requires installation by a qualified electrician. Before installing be sure to read all instructions and **TURN POWER OFF TO THE JUNCTION BOX**

- ① Remove the light engine hub from the fixture by removing the brass thumb nuts behind the hub.
- ② Remove the driver plate by loosening the Phillips head screws holding the plate in the .
- ③ Reach into the light engine and remove the 1/4 IPS nut, lock washer, and 1.5" flat washer. Then carefully remove the crossbar assembly from the top of the fixture.
- ④ Make electrical connections between the fixture leads and the line voltage wires. Keep the wire connections in the junction box.

CRITICAL NOTE: If 0-10V dimming control is to be used, connect the 0-10V driver leads to a 0-10V dimmer. Otherwise, the tinned ends of these leads should be snipped off and the leads should be capped individually such that they remain isolated from one another.

- ⑤ Attach the crossbar assembly to the junction box using the supplied #8-32 screws. Connect a bare ground wire to the green screw on the crossbar assembly.
- ⑥ Raise the shade up towards the junction box. The threaded nipple on the crossbar assembly should be centered with the center hole in the shade. Use the 1.5" flat washer, lock washer, and 1/4 IPS nut (in that order) to the threaded nipple to secure the shade tightly to the ceiling, covering the junction box.
- ⑦ Reinstall the driver plate. Align the screw heads on the wood hub with the holes on the light engine, and secure the hub to the fixture with the brass thumb nuts.

