

Proper Care and Maintenance of Your Cerno Product

These are general product instructions. Always check our product instructions for any care instructions specific to a particular product.

Wood Surfaces

Clean with a damp, lint-free cloth. Furniture polish can be used to revitalize surfaces. Excessive moisture can damage wood finishes.

Metal Surfaces

Clean with a damp, lint-free cloth. Do not use chemical cleaners or solvents.

Polymer Surfaces

Clean with a damp, lint-free cloth. Do not use chemical cleaners or solvents.

Fabric Surfaces

Clean with compressed air. Avoid using water on fabric surfaces.

Glass Surfaces

Clean with glass cleaner and a soft cloth. Rough surfaces can scratch glass.

Leather Surfaces

Clean with a damp cloth. Leather cleaner can be used to revitalize surfaces.

Stone / Concrete Surfaces

Clean with water and a cloth or brush.