

General Product Information

CAUTION - RISK OF FIRE

This product requires installation by a qualified electrician. Before installing be sure to read all instructions and TURN POWER OFF TO THE JUNCTION BOX


This product is suitable for indoor dry or damp locations.

Damage due to incorrect connections can be detected at the factory and is not covered under warranty.

Junction Box Requirements: This fixture can be mounted to most standard junction boxes. It is the installer's responsibility to ensure that the site conditions, junction box, and fasteners used are suitable to support the weight of the fixture.


It is the installer's responsibility to verify that the provided suspension hardware is suitable for the site conditions.

Dimming Notes: This fixture is compatible with TRIAC, ELV, and 0-10V dimming.

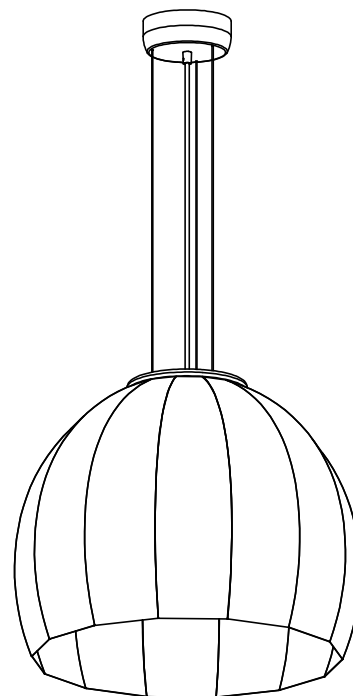

Adjusting the Fixture Height

- ① Measure the desired height (H) that you want the fixture to hang below the ceiling.
- ② Slip the suspension cables through the small holes in the canopy.
- ③ Adjust the length of the suspension cables to the desired length by pushing them into the cable grippers located on the crossbar assembly. Final adjustments can be made after the fixture has been mounted.
- ④ Feed the cord from the light source through the wood shade hub, strain relief, canopy, driver plate, and cord gripper.
- ⑤ Adjust the cord to the desired length and tighten the set screw on the cord gripper. Final adjustments can be made after the fixture has been mounted.

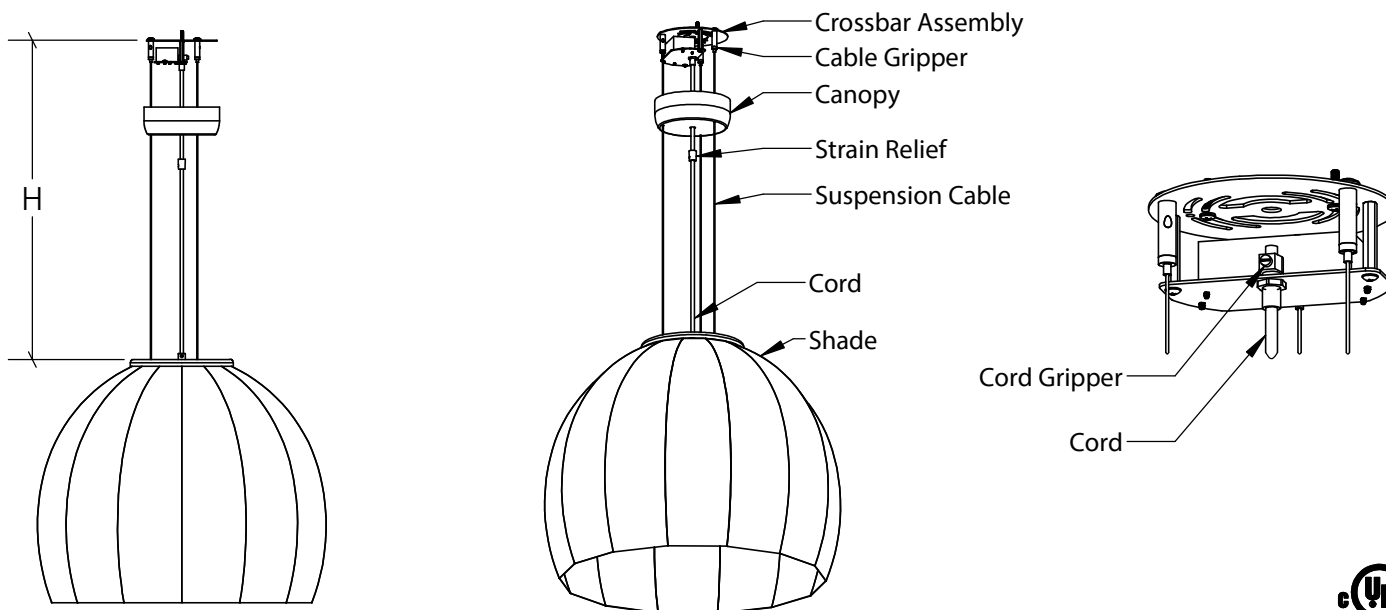

Electrical Connections and Mounting the Fixture

- ⑥ Install the mounting plate to the junction box using the provided #8-32 screws.
- ⑦ Make the final adjustments to the length of the aircraft cables and cord. Then cut and strip the power cord about 1/2 inch longer than the desired height (H).
- ⑧ Make the electrical connections shown in the diagram using the provided wire nuts.

Critical Note: If 0-10V dimming is to be used, connect the driver dimming leads to the 0-10V dimmer. Otherwise the tinned ends of these leads should be snipped off and the leads should be capped individually so that they remain isolated.

- ⑨ Slide the canopy up over the mounting plate and secure it by fastening the canopy strain relief. Then tighten the set screw on the canopy strain relief.

