

Lutron x Cerno Art Light

DIRECT WIRE WALL MOUNT

CAUTION - RISK OF FIRE

This product requires installation by a qualified electrician. Before installing be sure to read all instructions and **TURN POWER OFF TO THE JUNCTION BOX.**

General Product Information

This product is suitable for indoor dry and damp locations only.



This is a Lutron Native by Design™ fixture and must be used with Ketra Residential HomeWorks Controller & Power Supply.

It is the installer's responsibility to ensure that site conditions, junction box, and fasteners used are suitable to support the weight of the fixture.

This is a guide on how to install the Direct Wire Wall Mount version of the Lutron x Cerno Art Light to your desired location and/or canvas. See the X96 Ketra Controller Installation Guide and LS0 Lightbar Slim Installation Guide on Lutron's website for information on how to install the controller and connect the fixture to the controller.


Determining Location for a Junction Box

- 1) Determine where the center and top edge of the artwork will be located after installation. Place the centerpoint of the junction box vertically in line with the center of the artwork and 0 to 4 inches above the top edge of the artwork. This height is dependent upon the width of the border along the artwork's frame. A 4in square deep junction box with a 3in round plaster ring is recommended for mounting.

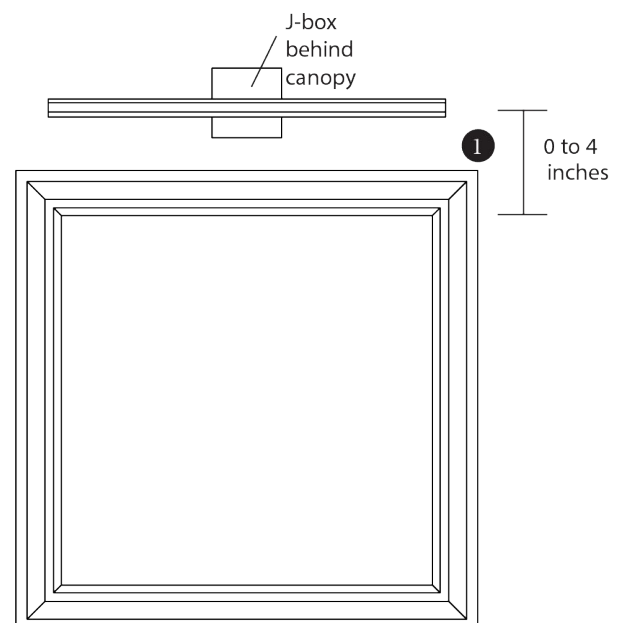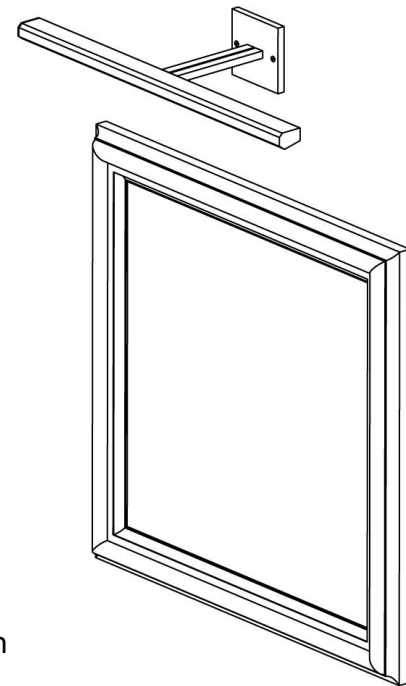

Assemble the Fixture

- 2) Feed the mounting arm through the cover plate and feed the four wires exiting the mounting arm through the center hole of the canopy.
- 3) Fasten the canopy to the mounting arm using the #8-32 button head screws and the 3/32" hex key included in the hardware kit. Tighten until connection is rigid and secure.

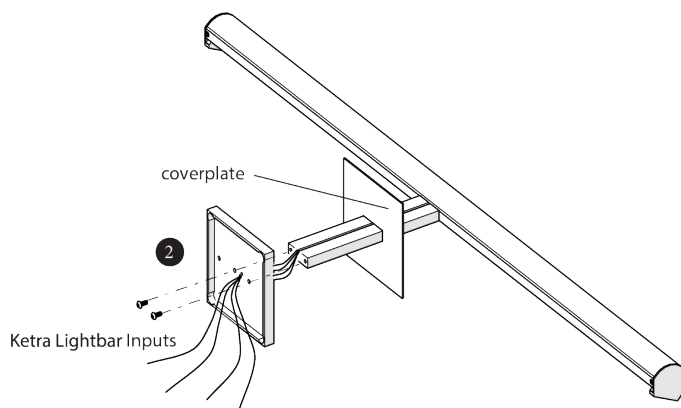

Install the Fixture

- 4) Fasten the crossbar over the opening of the J-box using the included #8-32 x 3/4" Phillips head machine screws.

Critical note: Ensure that the fixture is connected to the controller according to Lutron's Ketra Installation Instructions

- 5) Fasten the canopy to the universal crossbar using the included #8-32 flathead socket screws and the 3/32" hex tool. Remove the backer from the tape strips on the coverplate and adhere the coverplate to the canopy.

